



Window and Door Measurement Guide

Thank you for your interest in replacing your windows or doors with us. Please follow the instructions to make your virtual consultation and quote quick and easy.

Please have at hand:



We'll make it easy.

It is important to measure everything right, so please follow these instructions. However, before any order goes into production, we send one of our professional re-measure technicians to take final measurements, to make sure every window or door **will fit right**. So, don't worry!






How to Measure Your Windows

Please measure the **width**, **height**, **depth**, and note the **type** of each window as well as the **opening direction**. Note the **casing width**. Label each window (e.g. Kitchen, above sink). Draw a sketch or take a photo if needed.


1 Width

Measure the window frame, inside the jambs. **Take 3 measurements**: in the middle and near the top and bottom. **Record the lowest of the measured dimensions**.

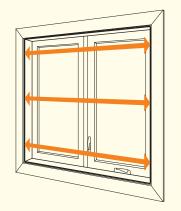




Record the **width of the casing** (interior trim / moulding bridging the window frame and the wall).

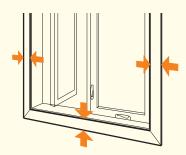



Measure the inside of the window frame, from head to sill. **Take 3 measurements**: in the middle and near the jambs. **Record the lowest value**.

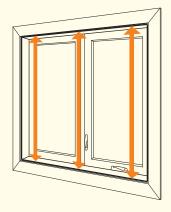



Open the window and measure the frame depth, excluding the inside casing and exterior trim. Try measuring in the middle and at the ends. **Record the lowest value**.



Common window types, for reference.



Single, left-hinged Single, top-hinged

Casement



Hung Single or double






Fixed / Picture



Shaped Any non-rectangular window, fixed

Single or do	uble	Does not ope
_		
) (



Bay / Bow Made of 3+ windows, operable or fixed, protruding outside

Multi-lite / structural

Window with multiple sashes (opening

or fixed), separated by mullions






How to Measure Your Doors

Please measure the **width**, **height**, **depth**, and note the **hinge position** of your door frame. If **transoms** or **sidelites** are present, measure these too, including **mullion** widths. Note the width of the **casing**. Draw a sketch or take a photo if needed.


Measure the door frame inside the jambs. Take 3 measurements: in the middle and near the header and threshold. **Record the lowest** of the measured dimensions.

Width

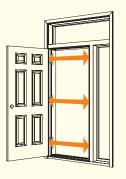



Measure the inside of the door frame, from head to threshold. Take 3 measurements: in the middle and near the side jambs. **Record the lowest value**.

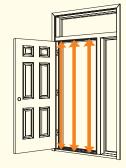





Measure the door frame depth, from the inside casing to the exterior trim or flashing. Take 3 measurements: in the middle and near the ends. **Record the lowest value**.






Record the **hinge position** as seen from the inside (left/right).

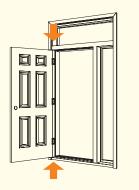



If your door has sidelite(s) (A) or a transom (B), **repeat steps 1 and 2** for each. Please also record the width of the **mullion**(s) in between.

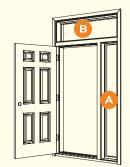

6 Casing

Record the **width of the casing** (interior moulding / trim bridging the door frame and the wall).

